



# Schmutzradierer 5er Pack

Dirt eraser, pack of 5

Abrasive, quick cleaning special sponge for removing stubborn stains and dirt such as rubber marks, ballpoint pen stains, tea and coffee stains, grease stains, chewing gum, tar stains, etc., from hard surfaces.

## Areas of use

Hard surfaces. Caution with painted surfaces!

## Recommendations for use

Moisten the dirt eraser before use! Simply wash out dirty sponges and use again. Warning:  
Always test sensitive surfaces first on an inconspicuous part. In particular with painted surfaces (matting) and leather (change of colour). Never use together with cleaners. In case of heavy dirt change sponge frequently.  
Do not bring into contact with food. Not suitable for body care. Keep out of the reach of children.

## Container

*Item no.*                      *Container*

|        |       |                     |
|--------|-------|---------------------|
| 999328 | 1 Pkg | Maße: 10 x 6 x 4 cm |
|--------|-------|---------------------|

## Notice

This product information can advise you only without obligation. Liability on our part can not be derived.  
Please check whether the product is suitable for your application. We will be pleased to assist you.